

How to Access and Navigate the Device Menu

This document applies to products with a dot-matrix display as seen below.



Play,Prev,Next refers to "Computer Play","Computer Prev","Computer Next".



Access the device menu - Hold Play on your remote control for around 5 seconds



Navigate in the menu - Move up/down by using Prev/Next buttons on the remote

Select items or enter sub-menus - Press Play on the remote

Exit the menu - Navigate to the bottom of the menu and press Exit, or wait until the menu times out on its own(usually around 30 seconds)